




Elizabethan Classics

Assembly Instructions for RM21 thru RM25

NOTE: USE TEFLON TAPE ON ALL THREADED CONNECTIONS


1. Shut off the water supply valves before installation.
2. According to your requirement, connect the riser or swivel arm connector kit to the faucet body.
3. Attach the diverter lever onto diverter valve and tighten the diverter screw.
3. Install handles. After installation is completed. Turn on the water supply valves and allow both hot and cold water to run at least one minute each. While water is running. Check for leaks, especially at hook-ups to supply lines. Tightening nuts slightly will stop any minor leaks.

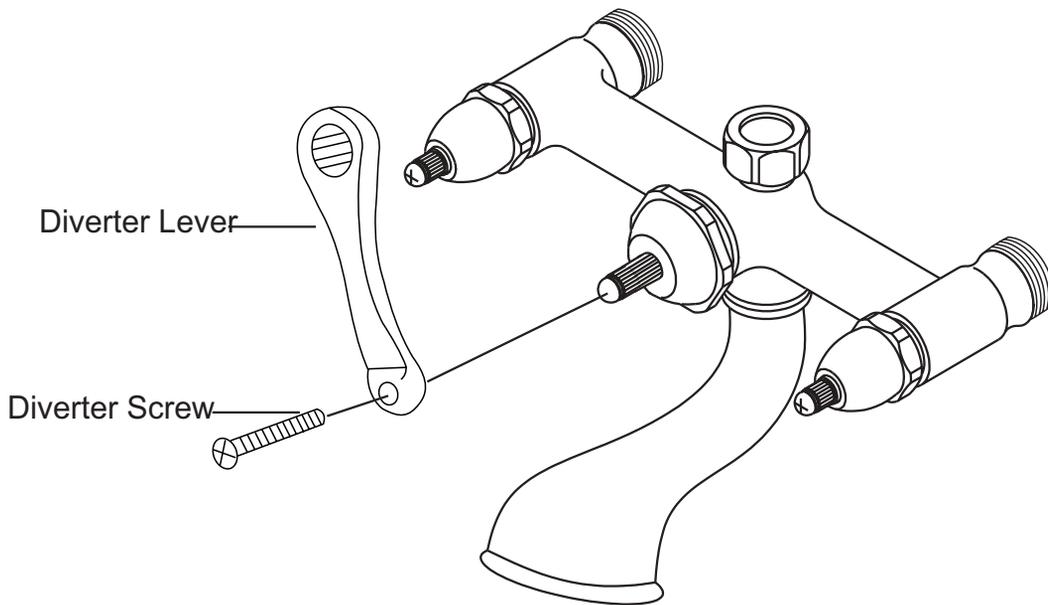

Assembly Instructions for Handles


Lever Handles:

1. Be sure that the broach screws are tightened before installing the lever handles.
2. Install the lever handles on the broaches and tighten the set screws using the allen wrench provided.

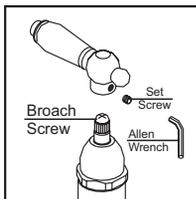

Cross Handles:

1. Remove the screws from the top of the broaches.
2. Remove the insert caps from the cross handles.
3. Put the cross handles on the broaches and then tighten the screws. Insert the caps on the cross handles.

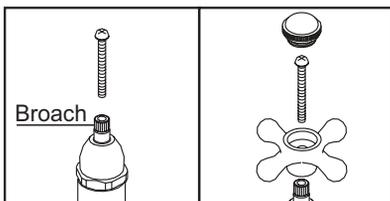




Elizabethan Classics

NOTE: USE TEFLON TAPE ON ALL THREADED CONNECTIONS

1. Place the round rubber washer in the riser joint and attach the adapter & shower arm diverter to the rise joint.
2. Place the cone washer around the end of the shower riser that you will fit into the adapter & shower arm diverter. Slide the brass nut onto the other end of the shower riser and slide it down so that it sits on top of the cone washer. Place this end of the shower riser into the top of the adapter & shower arm diverter and tighten the brass nut.
3. Slide the cradle onto the shower riser and secure it in the desired location by tightening the allen screw.
4. Attach the hose to the shower arm diverter and t the hand shower. Place the hand shower on th cradle.

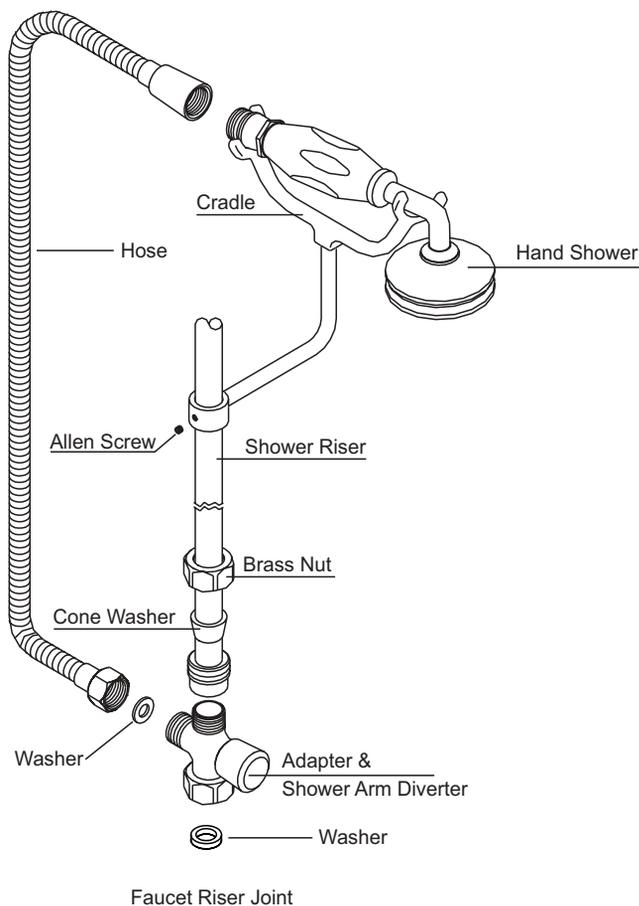



Elizabethan Classics

NOTE: WRAP AT LEAST 3 LAYERS OF TEFLON TAPE ON ALL THREADED CONNECTIONS

1. Faucet and handle installation: Please see the installation instruction which is included with your faucet.

TWO PEOPLE ARE RECOMMENDED TO COMPLETE THE FOLLOWING STEPS:

2. Remove the nut and cone washer from the faucet's riser joint and slide onto the unthreaded end of the 36" riser.
3. Slide shower arm into the shower riser connector to approximately 10 inches below the top of the bend of the shower riser. Only tighten this joint slightly because it may require adjustment later.
4. Remove coupling connector from the 36" riser. Wrap teflon tape onto the threaded ends of shower arm and 36" riser. Assemble the shower arm and 36" riser using the coupling connector. Insert the plain end into the riser joint and secure by tightening the nut.
5. Measure the distance from the shower riser connector to the wall. Cut the unthreaded end of the wall brace to the desired length.
6. Connect the escutcheon plate to the wall brace and secure by tightening the screw. Thread the wall brace to the shower riser connector. Attach the escutcheon plate to the wall using the screws and anchors provided.
7. Slide the shower enclosures into the shower riser connector and shower enclosure connector, and secure with screws provided.
8. Measure the distance from the shower enclosure to the ceiling. Cut the unthreaded end of ceiling brace to the desired length.
9. Connect the escutcheon plate to ceiling brace and secure by tightening the screw. Thread the ceiling brace to the shower enclosure connector. Attach the escutcheon plate to the ceiling using the screws and anchors provided.
10. Connect the shower head to the shower riser.

