


INSTALLATION INSTRUCTIONS TOWEL LOOP 2030.

The Towel Loop is designed to be installed in the bathroom. Its' generous proportions provides ample room for a selection of towels or washclothes.

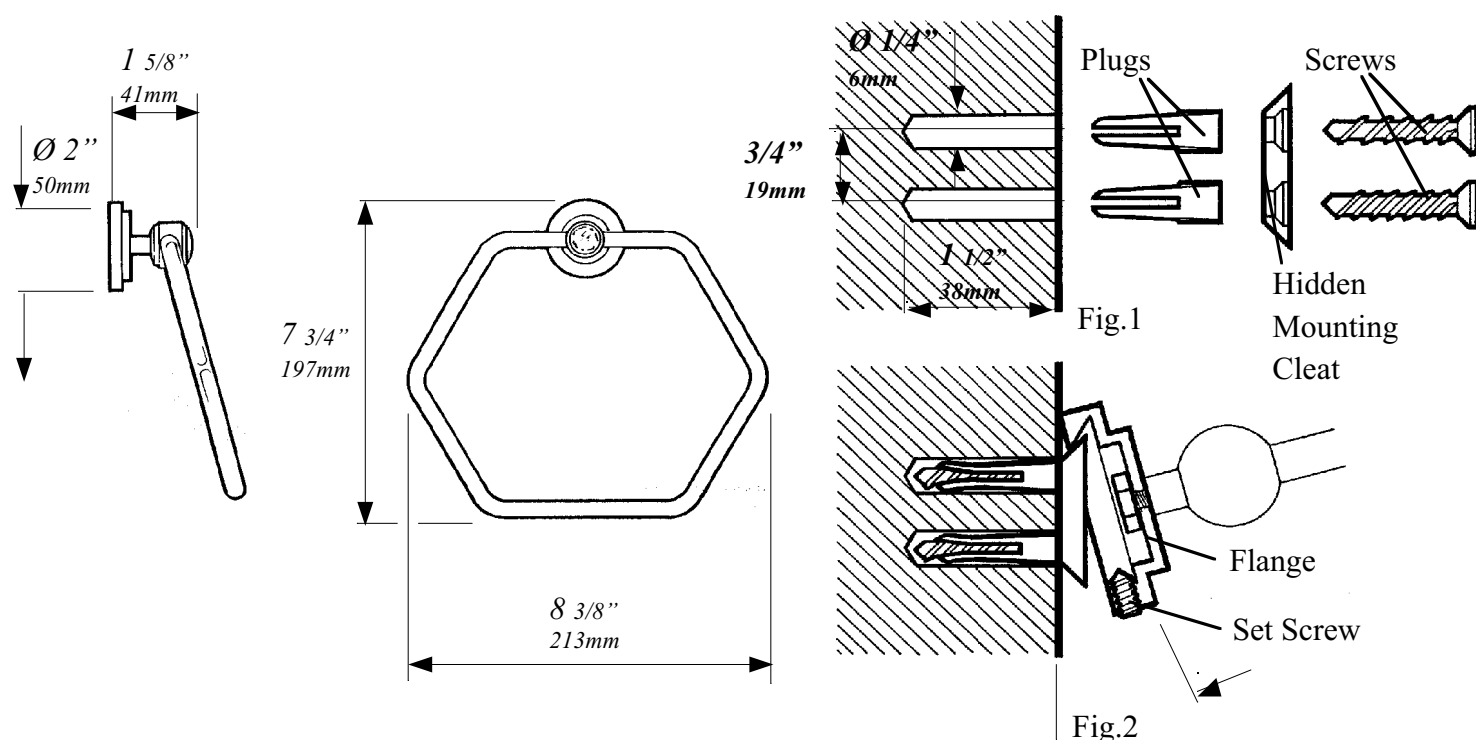


N.B. The measurements on the drawings above are provided as a guide only. Due to the nature of manufacture, variations may occur and therefore we recommend that you use the components themselves as a template for installation wherever possible.

First remove the hidden mounting cleat from the back of the flange by loosening the set screw at the bottom of the flange.

Present the towel loop to the wall at your chosen position. Hold it firmly in place while you mark the vertical centre line of the flange. Measure 5/8" (15mm) directly down from this mark for the position of the **top** hole for the hidden mounting cleat, **as illustrated here.**

Now use the hidden mounting cleat itself as a template to mark the **bottom** hole, it is recommended that you drill the top hole and attach the hidden mounting cleat with one screw using the top hole in order to mark the bottom hole accurately.

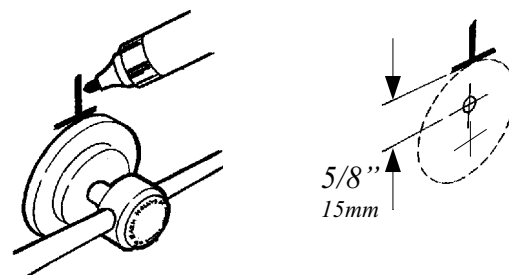

Screws and plugs are provided for installing the towel loop to a solid brick or stone wall, however, a more appropriate method of fixing may be necessary depending on the structure of the wall. If you are using the screws and plugs provided then the holes should be drilled $\text{\O}1/4"$ ($\text{\O}6\text{mm}$). **See Fig.1**

Once the hidden mounting cleat is securely in place, present the towel loop up to it at a slight angle such that the top of the hidden mounting cleat engages the internal undercut in the back of the flange. **see Fig.2**

Push the towel loop firmly against the wall, ensuring the flange is flush, and using an 3/32" (2.5mm) Allen wrench tighten the set screw in the bottom of the flange.

Hollys of Bath
Braeside Works, Wesley Close, Frome,
Bath BA11 1EA, England.
Tel: +44 (0)1373 461693 Fax: +44 (0)1373 462676
e-mail: sales@hornbeam.ndirect.co.uk