



Neo Angle Supplemental Installation Instructions

These supplemental instructions will assist you in installing your neo angle shower walls and door. Use these instructions in addition to your main set of instructions for your new shower system. You will need two people for this installation. **Take careful measurement before cutting or drilling products.**

1. You will need to start with the installation of the two glass side panels.
2. Put a bead of clear silicone into the decorative trim grooves.
3. Set the glass side panels in to each groove. **Steady the glass so it will not fall.**

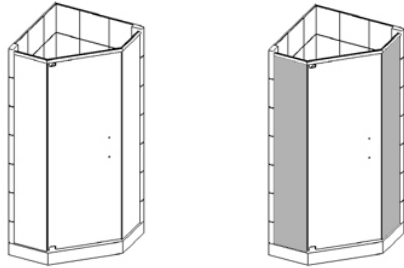

4. Layout the top metal header pieces with the top edge facing up as shown.

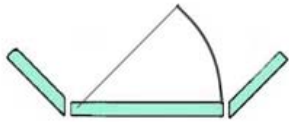


5. Locate the “Header Corner Mounting Brackets”.



6. They will slide into the channel as shown. Tighten to make them snug at this time.



7. Carefully, dry fit the header assembly unto the top of two side glass panels.

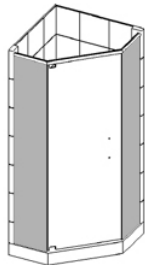


8. Measure for the proper location of the door hinges. Each install will vary.
9. Important: Double check for left or right hinge install.


10. You will need to remove the center pivot screw from the top hinge. Use the hole as drill guide.




11. Make a mark through the hole on the hinge onto the channel with the correct location to install the door hinge. **Note:** Some versions will require you to mark each end of the hinge and then drill in the center for the hinge screw placement.
12. Lift the top header assembly off of the shower.
13. Loosen the “Header Corner Mounting Brackets” from the center section that will go over the door. Remove that center section only.

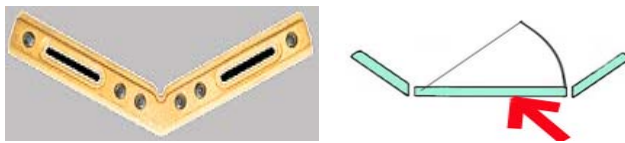

14. Take careful measurements. Drill a clearance hole to accommodate the screw.
15. Reconnect the top header assembly and tighten the screws.

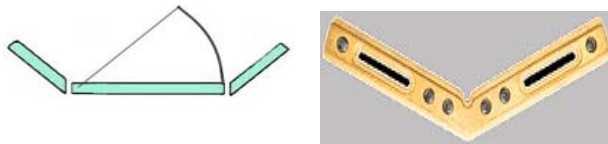

16. Screw the top door hinge together as shown with the channel facing up.

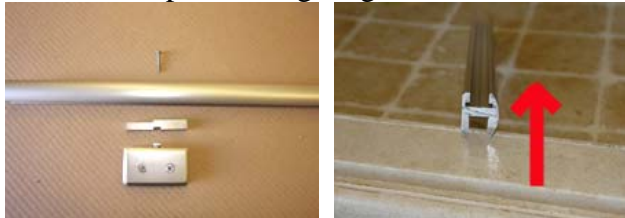


17. Take careful measurements and drill the holes for the bottom door hinge.



18. Screw the hinge into place. Screws on the bracket should face in toward the shower.
19. Place the glass rubber seal along the top of the two glass side panels. Cut the seal to the proper length.




20. Place the top header assembly onto the glass side panels and over the rubber seal.

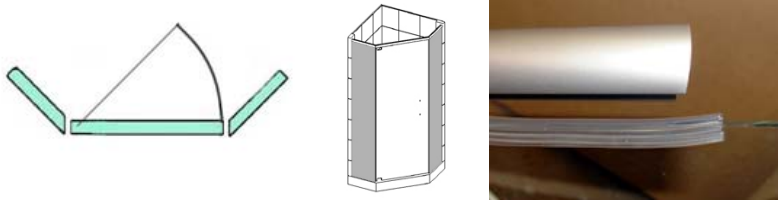

21. **Note:** Make sure that the header assembly sets securely.

22. You are now ready to hang the shower door.

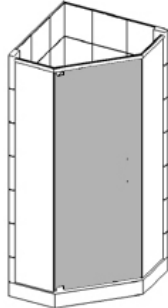

23. Carefully attach the hinges to the shower door as indicated in the main guide.

Important: Screws on the bracket should face in toward the shower.



24. Check for proper clearance of the door and adjust screws on the hinges if necessary.



25. Installation for the neo angle shower glass is now complete. Refer to the main installation guide to finish the shower system installation.

