


Fireclay Drop-In Sink Instructions

Tools and Materials

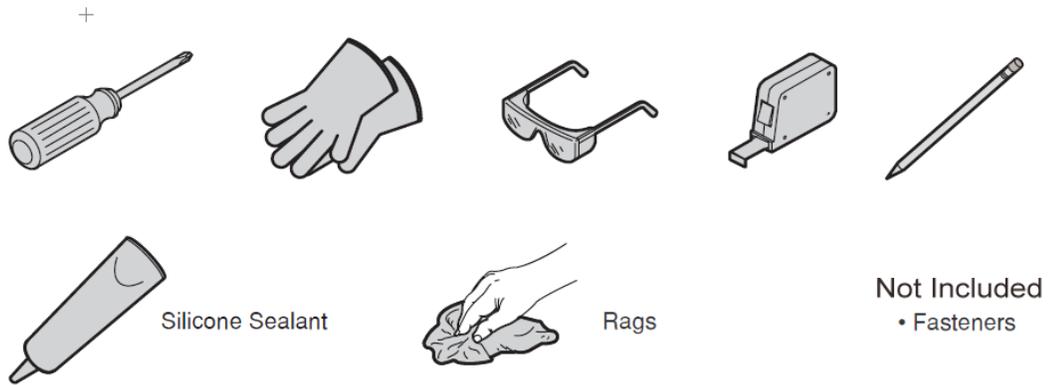


Caution:


- Edges are sharp. Wear gloves when handling the sink.
- Fireclay sinks are very heavy. Get assistance lifting the sink.
- Provide your countertop supplier with your sink and faucet model number when ordering your countertop.
- Read these instructions carefully before you begin this installation.
- Observe all local plumbing and building codes.
- Shut off the hot and cold-water supplies.
- Within 48 hours of receiving your new sink, unpack and inspect for damage. Return the sink to its protective carton until you are ready to install it.
- Due to the variety of installations possible with this sink, you may need to use procedures other than those described.
- It is very important that the proper materials are used with your sink. Proper selection of countertop is critical for a secure installation. Because of the variance in countertop thickness, your carpenter/plumber must beware of the exact type of countertop you choose.
- The cabinet and frame shown in these instructions are generic and may not represent the actual design or structure.
- Due to the nature of undercounter installations, Vintage Tub & Bath recommends that undercounter sink installations be performed by trained and experienced installers.
- To ensure a safe and damage-free installation, two people should install the sink.

Steps


1. Construct a wooden frame to support the sink. Measure your sink to determine the dimensions.

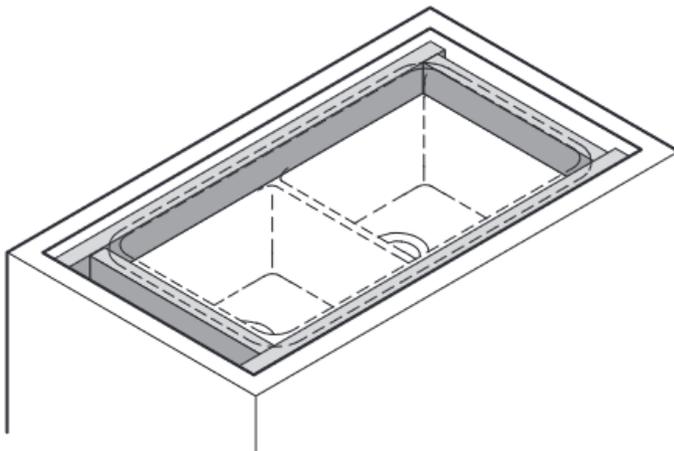


2. Clean the top and underside of the counter and the rim of the sink.

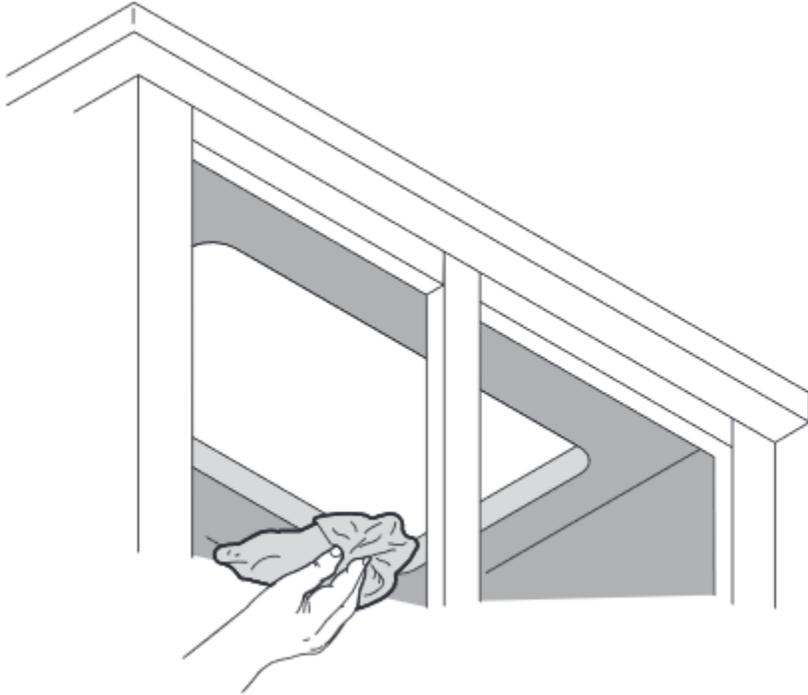


3. Apply sealant near the inside edge.

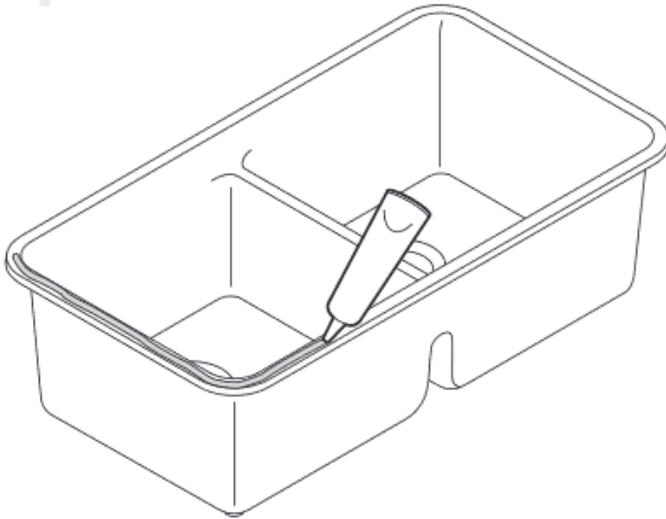


4. Set the sink into place. Level the sink with the top of the cabinet.

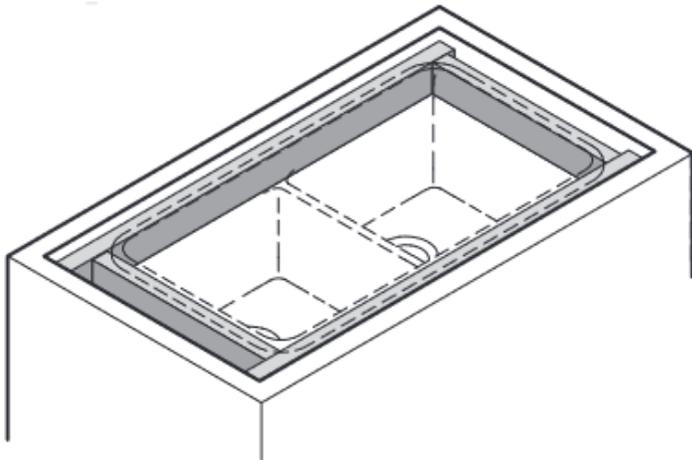

5. Apply silicone sealant, wipe away any excess. Fill voids and allow to dry.

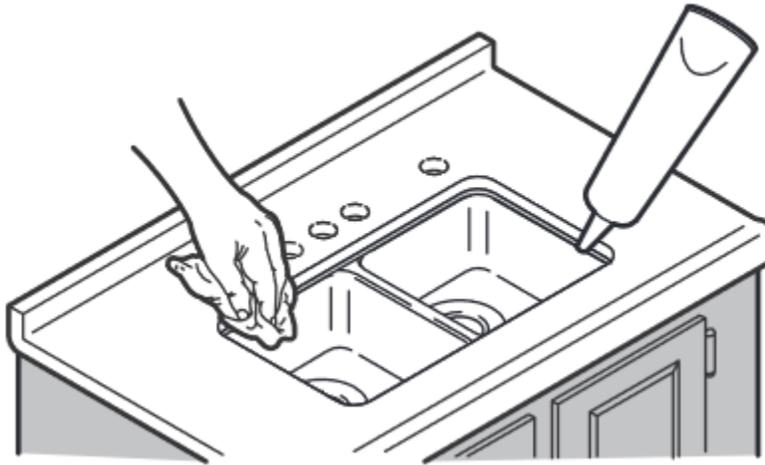

6. Install the faucet and the strainers.

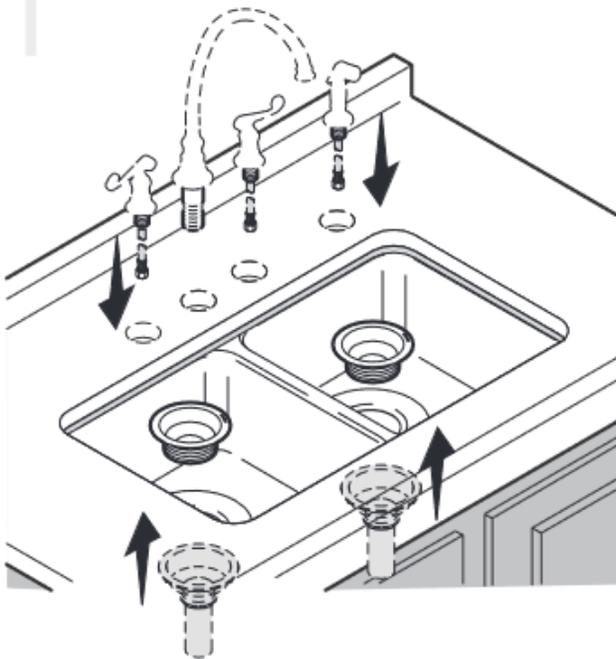

7. Complete the faucet and drain connections. Run water and check for leaks.

