

# Single View Medicine Cabinet Installation Guide

## Before You Start

Carefully remove your cabinet from its packaging and ensure that all the components are in good condition and are not missing. If you have a problem, please contact your distributor immediately. Place the door in a safe location to avoid any possible damages.

Before installation, you must determine which side of the cabinet box the door is going to open. To reverse the opening side, turn the cabinet box upside down.

**Tools Needed:** Safety glasses, measuring tape, Level, Robertson or Phillips head screwdriver #1 and #2, Electric Drill (Surface Mounting), Drill Bit, 3/16 (Surface Mounting)

**NOTE: Safety glasses should be worn at all times. Before you start, close the sink drain. This will avoid small dropped parts from falling into the drain.**


**Materials Included:** List here in a single concatenated line

### 1. Recess Mount Installation

*Arrange the wall opening with studs on both sides of the wall.*

- I. Prepare wall opening to the required dimensions according to the cabinet model (21) (see products description on page 4). **The distance between the higher point of the faucet and the bottom of the cabinet box (21) has to be 1" (25,4mm) minimum.**
- II. Position cabinet (21) in the opening and level the cabinet.
- III. Using the pre-drill holes on the cabinet (21) sides, fix the cabinet (21) to the studs on each side of the cabinet by using the screws (9) along with the plastic washers (10). To not deform the sides of the cabinet do not overtighten the screws (9). Insert snap caps (11) on washers (10) to cover the screws (9).


**To continue with the recess mounted installation, go directly to step 4.**

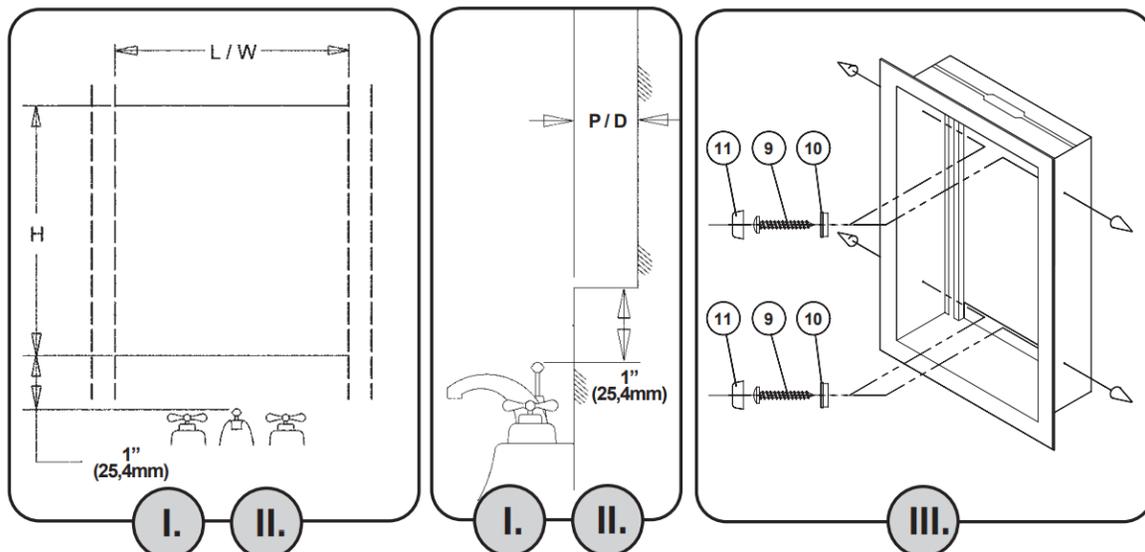

# Single View Medicine Cabinet Installation Guide

## 2. Surface Mount Installation


- I. Position the cabinet at the desired emplacement. Level and make a mark underneath the cabinet (21). The distance between the higher point of the faucet and the bottom bracket (1) has to be 1" (25,4mm) minimum.
- II. Position the bottom bracket (1) on the mark made in the step above. Mark the hole locations. If there is no solid support (wood stud) behind the wall, drill holes and insert the plastic plug (17).
- III. Fix the bottom bracket (1) on the wall with the screws (9).
- IV. Install the top brackets (2) by sliding the ball end of each top bracket (2) into the clearance area provided on top slot of the cabinet at approximately 1" (25,4mm) from the cabinet's sides (21).
- V. Put both of top bracket (2) near cabinet ends (21) preferably facing wood studs. If there is no solid support (wood stud) behind the wall, drill holes and insert the appropriate plastic plug.
- VI. Place the cabinet (21) on the bottom bracket (1).
- VI. **\*\*IMPORTANT\*\*** Ensure the bottom bracket (1) is positioned in the groove provided under the cabinet (21).
- VII. Place the cabinet (21) in final position and fix the top brackets (2) with screws (9).

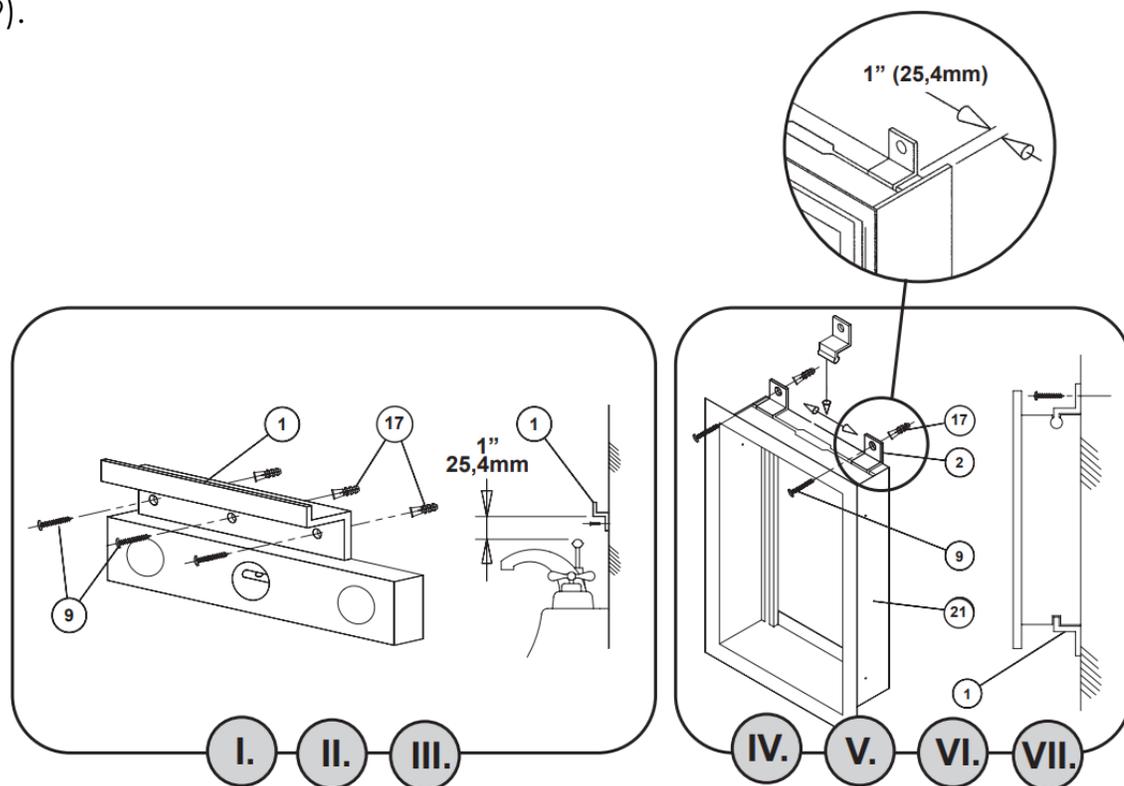

# Single View Medicine Cabinet Installation Guide

## 3. Side Mirrors Installation


- I. Fix two side mirrors brackets (4) on each side of the cabinet (8) by using screws (8) and plastic washers (10). Use the snap cap (11) to cover the screws.
- II. Once in place, apply two pieces of foam tape (15) on each side of the mirror brackets (4).
- III. **\*\*IMPORTANT\*\* The provided self-adhesive tape (15) is highly adhesive. Be careful while aligning side mirrors (3).** Remove the backing protecting the foam tape (15) and secure the side mirror (3) on to the mirror brackets (4). When installing the side mirrors, be certain that it is centered and flush with the top and bottom edge of the cabinet box.

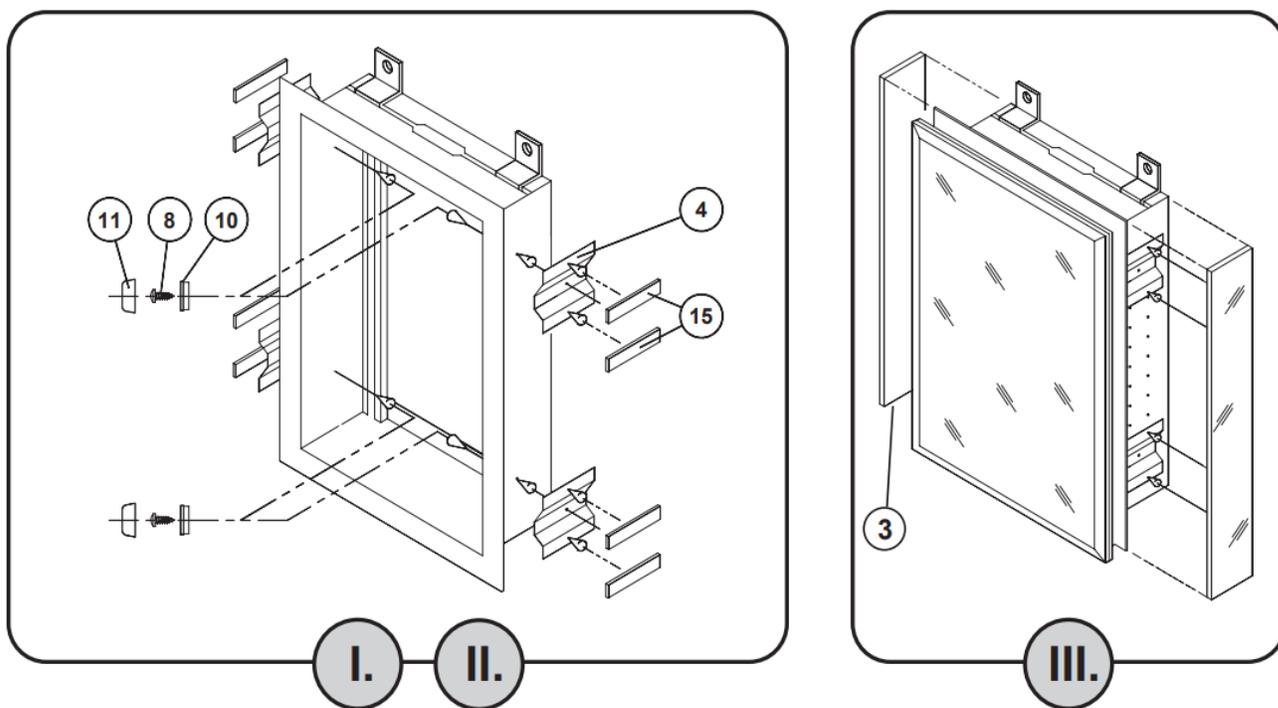


## 4. Hinges Installation

- I. Carefully remove the foam end caps from the door (5). Use foam end caps to protect the doors mirror.
- II. Install the hinges (6) in the mounting holes on the back of the door, as shown. Use the (7) screws and install with a #2 Phillips head screwdriver. Do not over tighten.


# Single View Medicine Cabinet Installation Guide

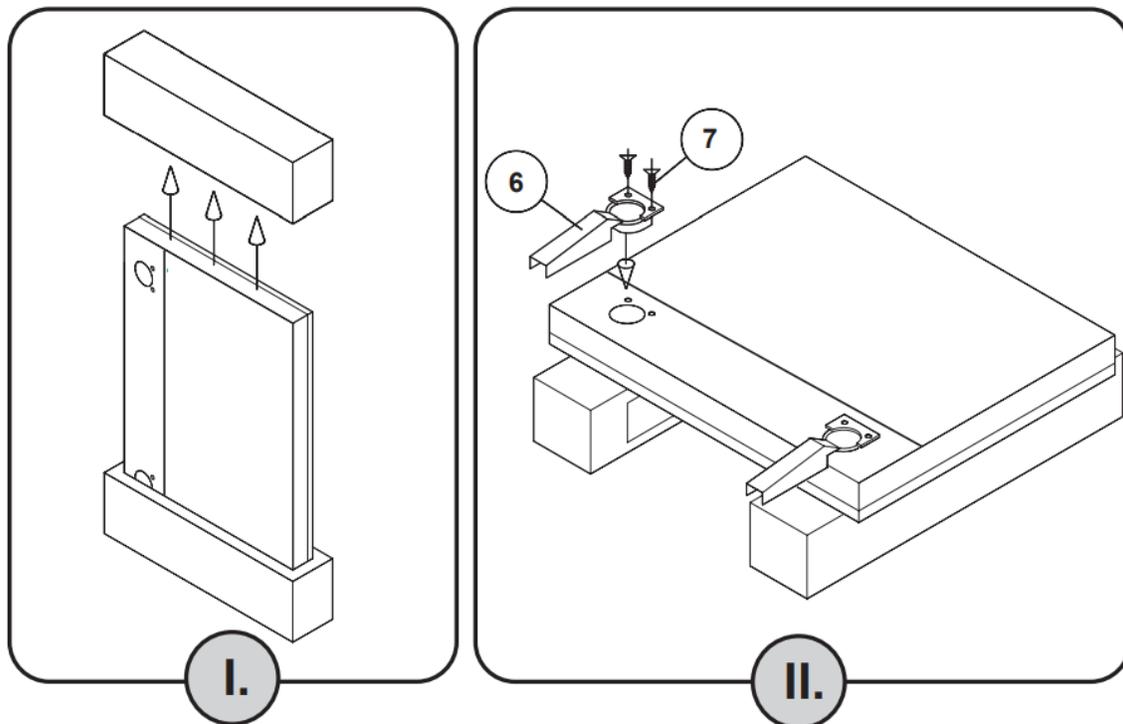

## 5. Door Installation

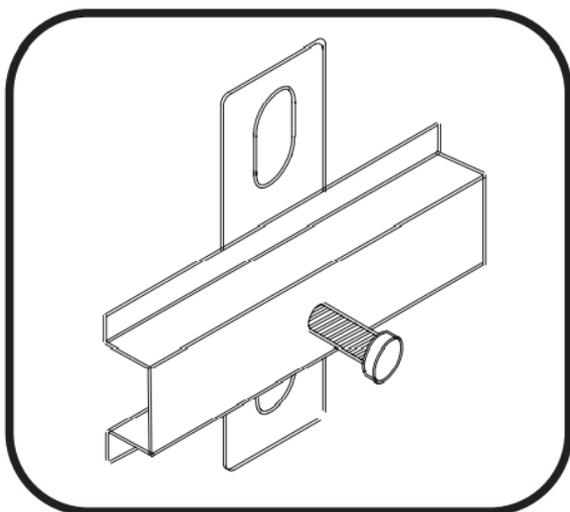


**Type A hinge**

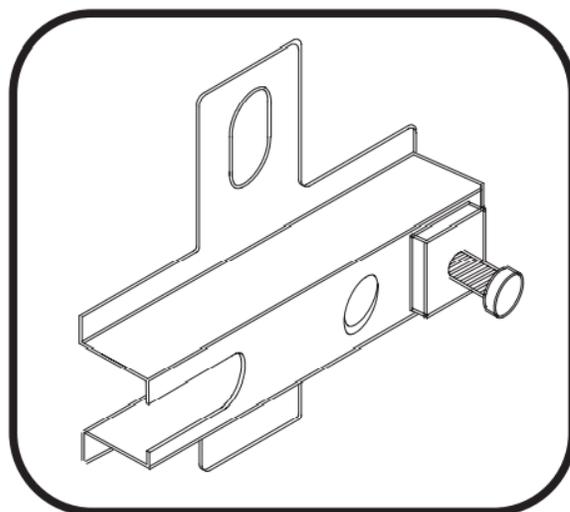

**Type B hinge**

# Single View Medicine Cabinet Installation Guide

- I. Using screws (19) and designed holes on cabinet (21), fix mounting plates (19) slightly.
- II. Type A hinge  
Install door (5) by inserting mounting plate's (18) screw in hinge's slot. Check if door is firmly attached to the hinges. If needed, tighten the mounting plate's (18) screw.
- III. Type B hinge  
Install door (5) by inserting back pin's hinge in mounting plate's slot. Check if door is firmly attached to the hinges. If needed, tighten the mounting plate's screw.
- IV. Since the door is reversible, put the plugs (20) in the remaining mounting plates holes.

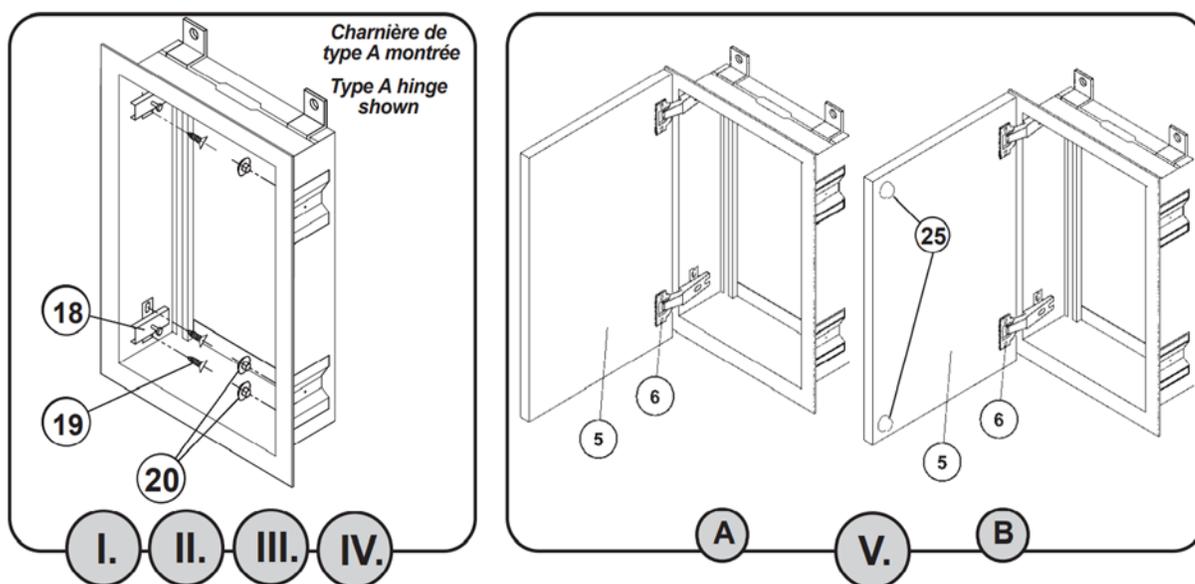

## 6. Door Adjustment

**Important! Ensure the door is being held prior to loosening any of the screws mentioned below. Slowly close the door to the make adjustments. Avoid slamming them.**

# Single View Medicine Cabinet Installation Guide

## In-Out Adjustment



If necessary, loosen the screw (C) on one of the hinges to adjust the contact between the door (5) and the cabinet (22). Re-tighten the screw (C) after the adjustment.

## Up-Down Adjustments

Loosen screws (B) on both mounting plates. Raise or lower door (5) to desired position and re-tighten screws (B).

## Left-Right Adjustments

Door (5) can be adjusted from side to side by turning screw (A) clockwise or counter-clockwise. The screws (A) can also be used to adjust the leveling of the doors.

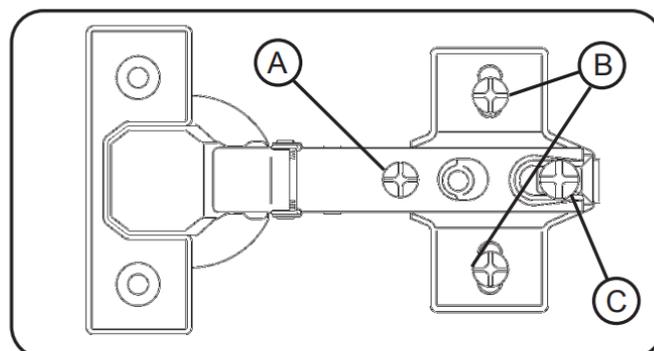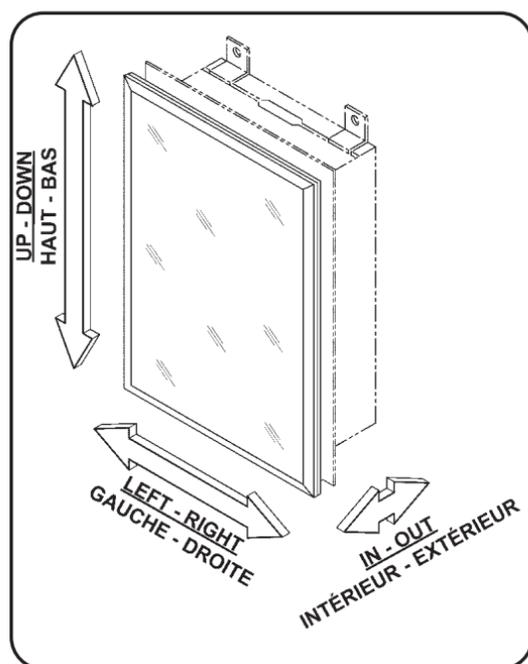

**Ajustement pour charnière de type A et B**  
**Type A and B hinges adjustment**

## 7. Shelves Installation

- I. Install screw (14) into shelf stop (13) only one full turn. **\*\*ATTENTION\*\*** Screw must not extend into the cabinet groove.
- II. Insert shelf stop (14) and shelf bracket (13) into groove. Slightly turn shelf stop and shelf bracket until it can slide inside the groove.
- III. Slide shelf stop (14) and shelf bracket (13) one inside the other.
- IV. Determine shelf (16) height before slightly tightening shelf stops (13) in place with screwdriver provided (23).
- V. Snap glass shelves (16) in place on shelf brackets (12) as shown.
- VI. Level shelves with level (24) and lock shelf stopper with screwdriver provided.

# Single View Medicine Cabinet Installation Guide

