



# Bath shower floor standing mixer Installation Guide

## Before You Start


We recommend using a professional plumbing installer if you are unfamiliar with vintage style bathroom fixtures and plumbing. Vintage Tub & Bath will not be responsible for any damage to the floor, walls, plumbing, or personal injury during installation. Please review all local plumbing and building codes to be sure your purchase is code compliant for your area.

**Tools Needed:** N/A


**Materials Included:** 1 Body, 1 Straight Pipe, 1 Hexagon Key, 2 Screws, 1 Decorative cover, 1 Open installation fixing base, 3 Expansion Screws, 1 Hand shower, 1 Gloves, 1 Instruction Book

**\*\*\*After opening the product, please refer to the parts listed in<standard parts list>. Check the accessories, if there is any defect, please contact the local supplier immediately. The height of the purchased bathtub should match the installation size of this product. \*\*\***


1. Firstly, as shown in the picture, let the straight pipe, decorative cover, and open installation fixing base connect on the hoses, and then make the hoses screw to the main body.

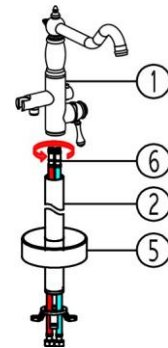

2. The main body's screw tooth and straight pipe's screw tooth are connected together.
3. The accordance following the diagram to carry out the construction of the inlet pipe part.

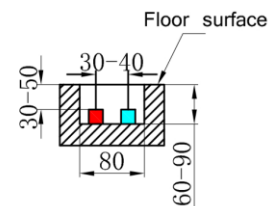


4. Connect hoses to inlet hoses.

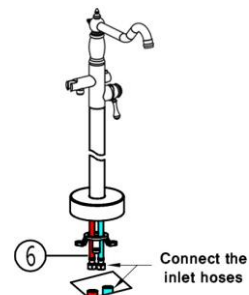


# Bath shower floor standing mixer Installation Guide


5. Make the fixing base install to the body component and use the hexagon key to lock the hexagon screw.

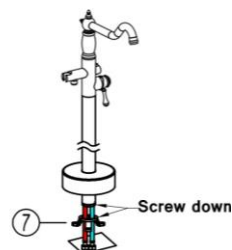

6. Following the picture size to drill holes.

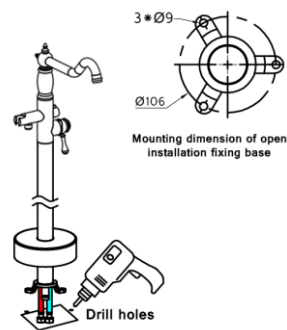

7. Install expansion screws fix the faucet component.

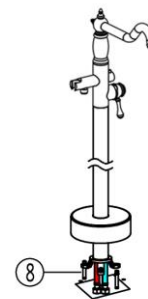

8. Make the shower hose install on the main body and hand shower.

