


# Installation Instructions for Recessed Tissue Holder

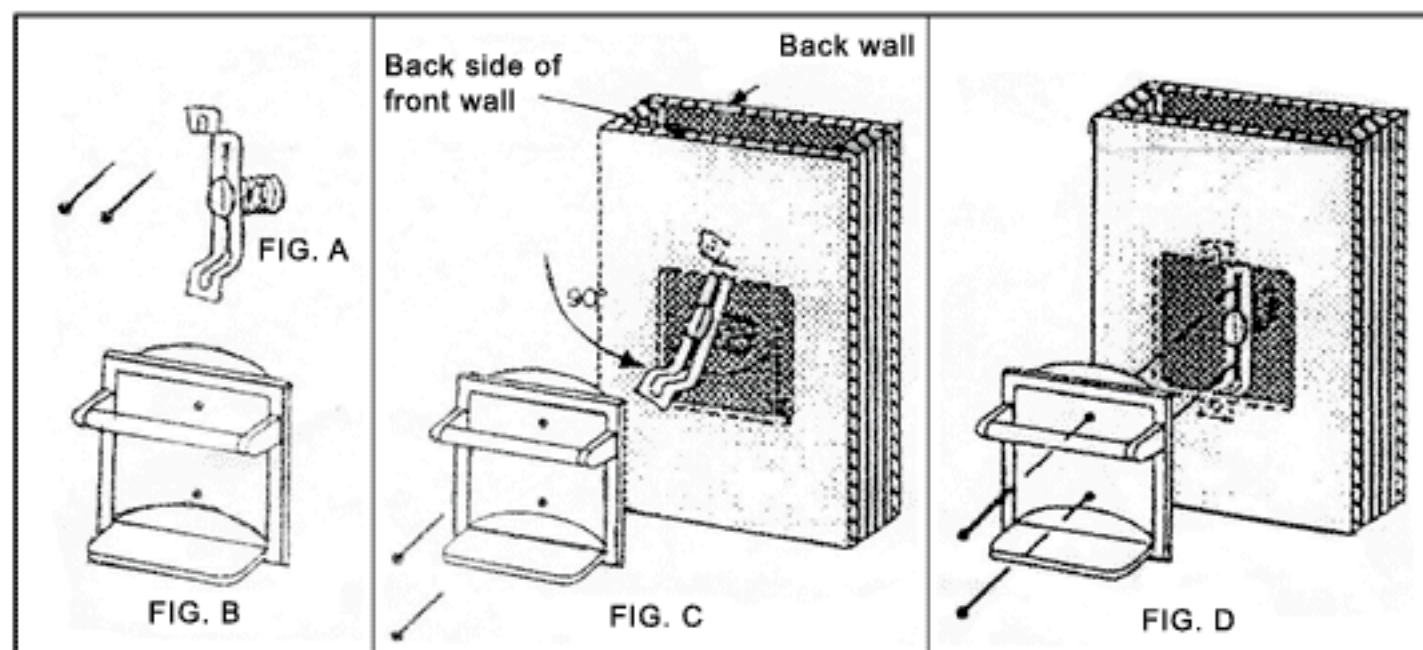

Installation clamp with spring (Fig. A) for easy installation of recessed bathroom accessories (Fig. B).

1. Affix tension spring to clamp by sliding spring end onto center of clamp (Fig. A). Ensure that spring is secure.
2. Tilt clamp as per Fig. C and insert in an upward motion, followed by a downward motion until clamp is centered in wall opening (Fig. C). The clamp will remain in place by the spring tension against back wall, which secures clamp to the back side of front wall. Make sure that ears of clamp are on the inside of the wall.
3. Install recessed bathroom accessory fixture by attaching screws through fixture into slots on clamp (Fig. D).

**NOTE:** If your tissue holder has screw holes which are horizontal, simply turn the mounting bracket 90° to a horizontal position.

