


# DRAIN & SUPPLY ROUGH-IN INFORMATION

## VINTAGE TUB AND BATH

### DRAINS:

The roughing-in of clawfoot tub plumbing starts with placing the drain. The drain rough-in hole is centered on a plumb line from the center of the roll rim to the floor. The center of the drain hole should be at least 4" from a finished wall. Rough-in 1 1/2" male IPS with 1/2" to 1" of threads and a Marvel (compression) coupling above the finished floor for the drain. Please note that Elizabethan Classics and Sunrise Specialty Drains measure 1 1/2" OD and do not require the compression washer that the 1 3/8" OD Sign of the Crab Drains require (included).

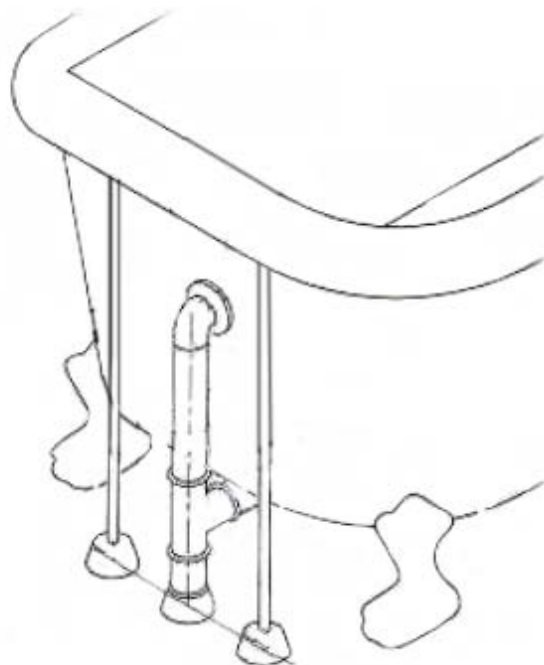

### SUPPLY LINES:

P0675 / ECSSLCP Deck Mounted Lines (no valves): Rough-in 1/2" male IPS with 1/2" of threads above finished floor. Center with drain as shown in the diagram.

[www.vintagetub.com](http://www.vintagetub.com)

NOTES: The supply line escutcheon diameter is 2 7/16"; drain escutcheon diameter is 2 11/16"; minimum distance needed to fit wall mounting supplies from edge of roll rim to wall is 2 3/4".

VINTAGE TUB AND BATH