



# Assembly Instructions

**MODEL# 300-01/300-02**

**NOTE: USE TEFLON TAPE ON ALL THREADED CONNECTIONS**


## INSTRUCTION FOR FAUCET

1. Shut off the water supply valves before installation.
2. Remove the handle bell and decorative base from the hot valve body. Thread the lock nut, metal washer and rubber washer down the valve body. Insert the valve body through the left hole in the bathroom sink from underneath. Install the decorative base and handle bell onto the valve body. Tighten lock nut with a wrench..
3. Remove the brass locking nut, brass washer and o-ring from the t-connector. Remove the t-connector, washer, lock nut, metal washer and rubber washer. From the top, insert the spout assembly in the center hole of the sink. From underneath, place the rubber washer, metal washer onto the threaded shank and secure with lock nut. Tighten with a wrench. Make sure the washer is inside the T-connector, then re-attach the t-connector, o-ring, brass washer, and brass locking nut. Tighten brass locking nut with a wrench.
4. Repeat step 2 using the cold valve body. .
5. Attach supply hoses to each side of the T-connector and to the outlets of the valve bodies.
6. Connect the supply lines (not included) to the valve body inlets.
7. Install handles (see below)
8. Turn on water supply and check for leaks.

## INSTRUCTION FOR POP-UP ASSEMBLY

1. Remove seat and top gasket from the pop-up assembly. Remove the drain tube and wrap top threaded end of the drain tube with teflon tape.
2. Slip drain body through the drain opening and thread seat and top gasket onto the drain body. Holding the drain body in position with the pivot rod opening facing the back of the sink. Thread the mounting nut onto the sink securely.
3. Drop the stopper into place. Remove the spring clip from pivot rod. Remove the pivot nut from drain body and slide it over pivot rod. Insert pivot rod into pivot rod opening, making sure the pivot engages the stopper properly. Thread the pivot nut onto pivot rod opening. Tighten the pivot nut firmly, being careful not to over-tighten.
4. With lift rod in position on faucet, insert the lift rod through the lift rod strap and secure with the set screw.
5. Guide the pivot rod through one of the holes on the spring clip and on the lift rod strap. Then slip the pivot rod through the other hole on the spring clip. Adjust the height of the lift rod by resetting the set screw.

## Handle Assembly

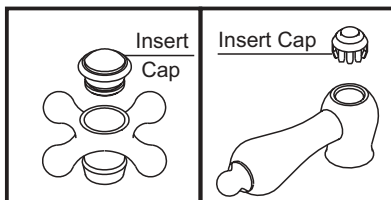

1. Remove the insert cap from the handle.
2. Unscrew the handle screw from the broach.
3. Install the handle on the broach. Replace & tighten handle screw.
4. Replace the insert cap.

